



User Manual

USB Lil Piglet Adaptor

Wireless Adaptor

Important Note: When First connecting to a new screen device will reboot to adjust resolution. This is normal, please be patient while the device reboots and adjusts to the new screen.

Thankyou for choosing HogPlay the leading motorcycle media company on the market! Please read this user manual carefully before operating your new HogPlay USB Adaptor,, HogPlay Mini Media, HogPlay Media Box. HogPlay Media box's and HogPlay USB Adaptors are not intended to enable video in motion. User should always engage in safe operation and never operate video while the vehicle is in motion. Doing so is strictly prohibited and is against the law. Please be safe and use video / entertainment options when parked.

Product Features

HogPlay USB Lil' Piglet Adaptors are intended to convert wired Carplay to wireless CarPlay or Android Auto to wireless Android Auto. You must have existing Android or Carplay to convert to wireless. This device does not include any video capabilities.

Instructions for use

Instructions for use: In order for this product to be function the motorcycle's entertainment system must be factory equipped w/ Wired Carplay or Wired Android Auto. It only converts existing Wired connection to Wireless. The HogPlay device needs to be plugged directly into the factory CarPlay port w/ no adaptors or splitters.

2023+ Harley Davidson, 2020+ Honda & Indian Motorcycles will require a HogPlay Bypass to allow factory wired connection to function.

Compatible phone models: Apple phone iOS 10 or above, Android phone Android 11 or above. Check phone details for compatibility before use.

How to connect


1. Ensure the motorcycle is started and running.
2. Allow your motorcycle's entertainment system to fully boot up and signal it is waiting for connections.
3. Connect the HogPlay USB CarPlay Adaptor to the motorcycle's factory USB CarPlay port.



(Please use only HogPlay approved Cables & included adaptors only.
Other brands cables may cause unstable connection and product failure)

NON-APPROVED USB CABLES & ADAPTORS WILL CAUSE ISSUES


4. Wait for 15 seconds for HogPlay home screen to load. You will see the LED on the HogPlay USB change from flashing to solid upon connection and loaded home screen interface..



HogPlay will power cycle itself during initial connection to ensure the ideal screen resolution and settings are used on your bike. Please be patient.

Wireless CarPlay

1. Click the CarPlay icon on the HogPlay home page.
2. Turn on Bluetooth and WiFi on your phone.
3. Search for HogPlay-XXX on Bluetooth for Pairing.
4. After connecting to Bluetooth, you may be asked to enable Carplay on your device. Please confirm any connection prompts on your phone & screen.

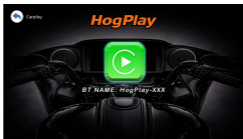

Android Auto

1. Click Android Auto icon on the HogPlay home page.
2. Turn on Bluetooth and WiFi on your phone.
3. Search for HogPlay-XXX on Bluetooth for Pairing.
4. After connecting to Bluetooth, you may be asked to enable Android Auto on your device. Please confirm any connection prompts on your phone & screen.

Some Android devices require Android Auto to be turned on manually in the settings screen and USB connections to be enabled



Frequently Asked Questions

Q: Why doesn't HogPlay connect?

A: Please check the USB port you are connecting to and ensure it has wired CarPlay. Only use approved HogPlay Media Cables

Q: HogPlay USB cannot connect to the radio or disconnects.

A: ① Unpair the Bluetooth connection between your phone and the original radio screen.

- ② Verify function of Factory CarPlay USB Connection and reset
- ③ Reset the original radio screen to factory settings, then reconnect your HogPlay USB Adaptor from beginning

Q: CarPlay/Android Auto cannot connect to your phone

A: ① Enable WiFi and Bluetooth on your phone, and ensure WiFi is not occupied by other devices. If it takes a long time to connect, manually select the device's hotspot from the WiFi list.

- ② Make sure your radio features wired Android auto if you wish to enable Wireless or Wired Carplay for Wireless support

Q: HogPlay shows a black screen on startup.

A: Ensure your motorcycle has factory WIRED CarPlay or Wired Android and it is enabled. Your radio must feature Android Auto for Wireless AA.

Q: The picture is not smooth/clear or audio is choppy

A: Disconnect HogPlay USB and go into device settings and delete HogPlay device. Unplug your HogPlay. Turn off your bike. Wait for the system to completely power down, Restart pairing process

Q: What's a HogPlay Bypass and when is it needed?

A: Some Factory screens require a headset to unlock WIRED carplay. On those screens a HogPlay bypass is required for HogPlay Media Box or HogPlay USB to function properly.